



Nero Studio 1.2 Litre Kettle  
Brushed Stainless Steel with Black Handle and Trim  
Product Number 740063

## INSTRUCTION MANUAL



Read this booklet thoroughly before using and save it for future reference.

**IMPORTANT SAFEGUARDS:** Read all instructions before using. Before connecting the kettle to the power supply, check that the voltage indicated on the appliance (underside of the kettle and base) corresponds with the voltage in your premises. If this is not the case, contact your dealer and do not use the kettle.

Images in this manual are for illustrative purposes only. Due to constant improvements we advise that changes to the design, material, specifications and product configuration may occur at any time without notice.

### !Warning

- Only use the kettle for heating water.
- Keep the children and infirm persons from the kettle when it is in operation.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Young children should be supervised to ensure that they do not play with the appliance.
- This appliance only coordinate with the power base supplied.
- Before cleaning, always disconnect from the mains and allow the kettle to cool. Never immerse the kettle in water at any time.
- If the supply cord is damaged, it must be replaced by the manufacturer or its agent or similarly qualified person in order to a void hazard.

**CAUTION:** Do not operate the kettle on a inclined plane. Do not operate the kettle unless the element immersed. Do not move while the kettle is switched on.

The heating element surface is subject to residual heat after use. This appliance is intended to be used in household and similar applications such as:

- staff kitchen areas in shops, offices and other working environments;

### REMOVAL OF MINERAL DEPOSITS

Your kettle should be periodically descaled as the mineral deposits in tap water may form scale on the bottom of kettle so as to reduce efficiency. You can use a descaler - such as our own Nero Descaler Tablets - and follow the instructions on the package. Alternatively, you may follow below instructions using white vinegar.

1. Fill the kettle with 3 cups of white vinegar, then add water to fill to the maximum line. Leave the solution in the kettle overnight.
2. Then discard the mixture in the kettle, then filling the kettle with clean water, boiling and then discard the water. Repeat several times until the odor of vinegar has been flushed away. Any stains remaining inside the spout can be removed by rubbing with a damp cloth.



### ENVIRONMENT FRIENDLY DISPOSAL

You can help protect the environment!  
Please remember to respect the local regulations: hand in the non-working electrical equipments to an appropriate waste disposal center.

Backed by the Nero 12 month replacement warranty  
Imported by: R Weatherdon & Co Pty  
Sydney, Australia  
www.weatherdon.com.au  
Made in China



**NOTE:** Ensure that switch is free of obstructions and the lid is firmly closed, the kettle will not turn off if the switch is constrained or if the lid is open.

4. Lift the kettle from the power base and then pour the water.

**NOTE:** operate carefully when pouring the water from your kettle, as boiling water will scald.

5. The kettle will not re-boil until the switch is pressed again. The kettle may be stored on the power base when not in use.

### BOIL-DRY PROTECT

Should you accidentally let the kettle operate without water, the boil-dry protection will automatically switch off the power. If this occurs, allow the kettle to cool before filling with cold water before re-boiling.

### CLEANING AND MAINTENANCE

Always disconnect the appliance from the power outlet before cleaning.

1. Never immerse the kettle, power cord or power base in water, or allow moisture to contact these parts.
2. Wipe the kettle with a damp cloth, never use a poisonous cleaner.
3. Remember to clean the filter at intervals. The filter can be detached for easier cleaning. **CAUTION:** Do not use chemical, steel, wooden or abrasive cleaners to clean the outside of the kettle to prevent damage.

- farm houses;
- by clients in hotels, motels and other residential type environments;
- bed and breakfast type environments.

- Do not let the cord hang over the edge of a table or counter or touch a hot surface.
- Do not place on or near a hot gas or electric burner or in a heated oven.
- Do not operate the appliance without anything in it to avoid damaging the heatelements.
- Ensure that the kettle is used on a firm and flat surface out of reach of children, this will prevent the kettle from overturning and prevent damage or injury.
- To protect against a fire, electric shock or personal injury, do not immerse cord, electric plugs or kettle in water or other liquids.
- While water is boiling, or just after the water has finished boiling, avoid contact with steam from the spout.
- Always take care to pour boiling water slowly and carefully without tipping the kettle too fast.
- Be careful when refilling when the kettle is hot.
- Close supervision is necessary when any appliance is used by or near children.
- Do not touch the hot surface. Use the handle or the button.
- The attached base can not be used for other than intended use
- During operation, wind the excessive cord into the inner of

base on the purpose of making the distance between the base and outlet is the shortest.

- Extreme caution must be used when moving an appliance containing hot water.
- The appliance is not a toy. Do not let the children play with it.
- The kettle is for household use only. Do not use outdoors.
- The use of accessory attachments, that are not recommended by the appliance manufacturer, may result in fire, electric shock or personal injury.
- Unplug the kettle from the outlet when not in use and before cleaning. Allow the kettle to cool before putting on or taking off parts, and before cleaning the appliance.
- To disconnect, turn any control to "off," then remove plug from wall outlet.
- If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
- This appliance has been incorporated with a grounded plug. Please ensure the wall outlet in your house is well earthed.
- Do not use the appliance for other than intended use.
- The kettle can only use with the stand provided.
- If the kettle is overfilled, boiling water may spill out.
- Save these instructions.



### BEFORE USING YOUR KETTLE

If you are using the kettle for the first time, it is recommended that you should clean your kettle before use by boiling a full kettle of water twice and then discarding the water. Wipe the surface with a damp cloth.

**NOTE:** the max capacity of kettle is 1.2L.

### OPERATION OF YOUR KETTLE

1. To fill the kettle, remove it from the power base and open lid by button on handle, fill with the desired amount of water, and then close the lid. Alternatively, the kettle may be filled through the spout. The water level should not exceed max marks or sit below min level. Too little water will result in the kettle switching off before the water has boiled. **NOTE:** Do not fill the water over the maximum level, as water may spill out of the spout when boiling. Ensure that the lid is firmly in place before plugging the power outlet.
2. Position the kettle on the power base.
3. Connect the plug into a power outlet. Press down the switch, the indicator will light up. The kettle will switch off automatically once the water has boiled.