

Nero[®]

BASIX HAIR DRYER

Product no: 7411551



220-240V~ 50/60Hz 1800-2200W CLASS II

INSTRUCTION MANUAL

Our products are engineered to meet the highest standards of quality, functionality and design.

We hope you thoroughly enjoy your new appliance. Carefully read the use instructions before use.

When using an electrical appliance, basic safety precautions should always be observed, including the following:

1. Before the first connecting of the appliance check that voltage indicated on the rating label corresponds to the mains voltage in your home.
2. If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
3. When the hair dryer is used in a bathroom, unplug it after use since the proximity of water presents a hazard even when the hair dryer is switched off.
4. For additional protection the installation of a residual current device (RCD) with a rated residual operating current not exceeding 30 mA is advisable in the electrical circuit supplying the bathroom. Ask your installer for advice.

5.



WARNING: Do not use this appliance near bathtubs, showers, basins or other vessels containing water.

6. Do not use the hair dryer for any other purposes than those described in this instruction manual.
7. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision
8. Do not use in outdoor.
9. Always unplug the hair dryer from the power supply when not in use and before cleaning.
10. To protect against the risk of electric shock, do not immerse the appliance in water or in any other liquids.
11. Do not spray aerosol products when the hair dryer is operating.
12. Do not leave the hair dryer switched on when not in use.
13. Do not use other attachments than the supplied ones.
14. The air inlet and outlet openings should never be obstructed to prevent from getting too hot.
15. If however, the airflow is inadvertently obstructed during use, the built-in thermal safety cut-off will automatically switch off the appliance. The hair dryer will switch on again automatically after cooling down for a few minutes.
16. Keep your hair away from the immediate vicinity of inlet opening to prevent from being drawn in.
17. Store the appliance in a cool, dry place. Do not use it when there is water in your hands.

Function

1. Put the plug in the wall socket.
2. Switch the appliance on by selecting the desired setting.

The airflow and temperature can be adjusted:

2 speed switch		Cool shot	
0	OFF position		
1	Low speed setting	I	Low temperature setting
2	High speed setting	II	High temperature setting

Cleaning

1. The appliance can be cleaned with a dry cloth.
2. The attachments can be cleaned with a moist cloth or rinsed under a running tap.
3. Remove the attachments from the appliance before cleaning them. Make sure the attachments are dry before using or storing them.

4. Never rinse the appliance with water.

Storage

When not in use, “unplug it.”

Allow the appliance to cool and store it in a dry location. This hair dryer features a loop allowing it to be conveniently hung on a hook for easy access. Never wrap the cord around the appliance since this will cause the cord to wear prematurely and break. If the supply cord of this appliance becomes damaged, the appliance must be replaced by returning to the retailer from which the product was purchased or a similarly qualified person in order to avoid a hazard.

Warranty Information


The manufacturer provides warranty in accordance with the legislation of the customer's own country of residence, with a minimum of 1 year (Germany: 2 years), starting from the date on which the appliance is sold to the end user.

The warranty only covers defects in material or workmanship.

The repairs under warranty may only be carried out by an authorized service centre. When making a claim under the warranty, the original bill of purchase (with purchase date) must be submitted.

The warranty will not apply in cases of:

- Normal wear and tear
- Incorrect use, e.g. overloading of the appliance, use of non-approved accessories
- Use of force, damage caused by external influences
- Damage caused by non-observance of the user manual, e.g. connection to an unsuitable mains supply or non-compliance with the installation instructions
- Partially or completely dismantled appliances

Correct Disposal of this product	
	This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmentally safe recycling.

Backed by Nero's 12 month replacement guarantee.

Nero is a registered trademark of

R Weatherdon & Co Pty Ltd

Made in China

Email: sales@weatherdon.com.au Ph: +61 2 9906 2202 Visit: www.weatherdon.com.au

This item is subject to change due to model updates from time to time.