

Attention:

1. Please read the owner's manual before using this product.
2. Do not fill iron with any other liquid except water.
3. The iron must not be left unattended while it is connected to the supply mains.
4. The plug must be removed from the socket outlet before the water reservoir is filled with water.
5. When setting the iron on support, be sure the support is stable.
6. Do not use the iron if it's broken or damaged after dropping. The appliance is not to be used by children or persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge, unless they have been given supervision or instruction.

Cautions:

1. Make sure that the applied voltage is the same as the rating voltage.
2. If the supply cord is damaged, it must be replaced by the manufacturer, service agent or qualified persons in order to avoid a hazard.
3. This iron is for household use only.
4. Do not immerse the iron into any liquid for cleaning.
5. Do not touch the hot metal plate, hot water, or steam to avoid scalding.

Main technical parameters:

 
Type	Rated voltage	Rated frequency	Rated power
R-338	220-240V	50/60Hz	2000-2400W

Nero[®]

Nero Steam Iron


Code: 742700 Ceramic

Code: 742715 Stainless Steel

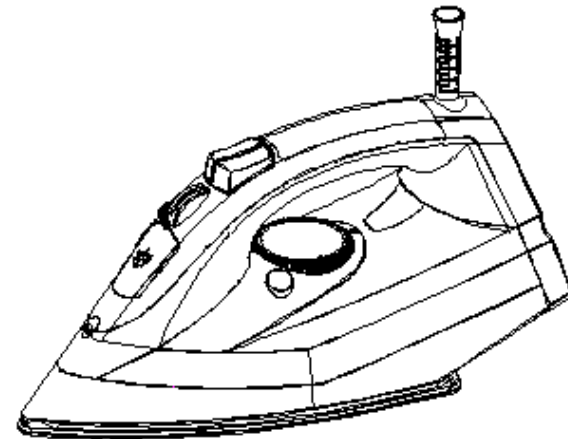

Please read these instructions before use and view the illustrations before using this appliance.

 Characteristics and structure:

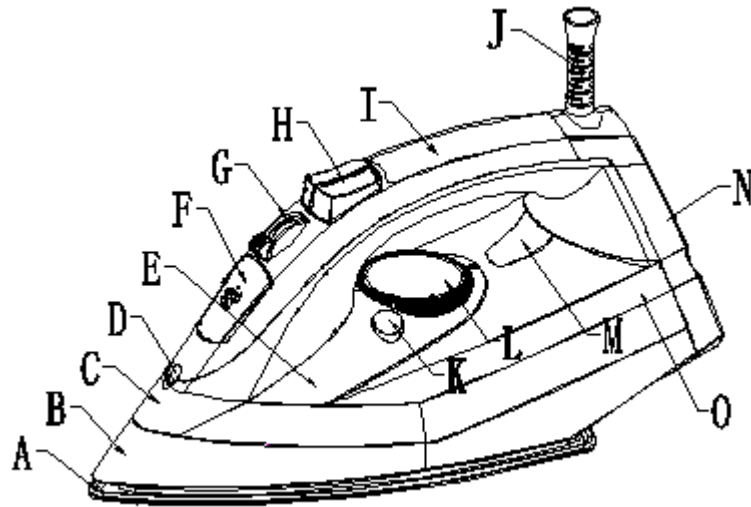

- | | |
|----------------------------------|---------------------|
| A: Soleplate | I: Top handle |
| B: Skirt | J: Cord guard |
| C: Handle | K: Clean button |
| D: Spray nozzle | L: Temperature dial |
| E: Water tank | M: Pilot light |
| F: Fill cover | N: Rear cover |
| G: Steam knob | O: Water tank cover |
| H: Spray & burst of steam button | |

Filling water:

1. Before filling with water, please pull out the plug first.
2. Set the steam control to the minimum position.
3. Pull down the cover of water filling mouth, and then fill with water.

Spraying:

Press the spray button, and water will spray out from the spray nozzle. Always keep enough water in the water tank.

Steam ironing:

1. To use steam ironing, turn the steam control to minimum position and set the temperature control at the ‘...’ or MAX position.
2. When the indicator light goes out, turn the steam control to the suitable position.

Burst of steam:

Set the temperature control at the ‘...’ or MAX position, then press down the burst of steam button.

Dry ironing:

Turn the steam control to minimum position, then set the temperature control to the suitable position.

Self cleaning:

Fill with water, then plug the iron into the mains. Set the temperature control to the maximum position. About 3 minutes later, press the self clean button for about 1 minute. Steam and hot water will be sprayed to clean the steam chamber. For best results use this function once every two weeks.

Anti-drip:

This iron is equipped with a drip stop function: the iron automatically stops steaming when the temperature is too low to prevent water from dripping out of the soleplate.

Anti-calc:

The anti-calc function filtrates the minerals from the water to prevent mineral residue build up in the steam chamber.

Automatic shut off:

If the iron is switched on and not moved for a period of 8 minutes while standing on its heel, or 30 seconds while standing on the soleplate, an internal safety feature will switch the iron off and the auto shutoff indicator will blink. Move the appliance sharply to switch it on again.

Storage:

After using, pull out the plug and pour out the remaining water. Turn the steam control to and the temperature control to 'min'. Let the iron cool down, then store the iron vertically in a safe and dry place.

1 Year Warranty

Imported By R. Weatherdon & Co Pty Ltd

Sydney - Australia

www.weatherdon.com.au

Made in China