
Nero®

INSTRUCTION MANUAL



NERO 2 SLICE TOASTER WHITE

Product Code: 746022

Rating: 220-240V ~50/60Hz 650-750W

General safety Instructions

- **Before commissioning this device, please read the instruction manual carefully.**

-
- Please keep these instructions, the guarantee certificate, the sales receipt and, if possible the carton with the inner packaging!
 - The device is intended exclusively for private and not for commercial use!
 - Always remove the plug from the socket whenever the device is not in use, when attaching accessory parts, cleaning the device or whenever a disturbance occurs. Switch off the device beforehand. Pull on the plug, not on the cable.
 - In order to protect children from the dangers of electrical appliances, never leave them unsupervised with the device. Consequently, when selecting the location for your device, do so in such a way that children do not have access to the device. Take care to ensure that the cable does not hang down.
 - Test the device and the cable regularly for damage. If there is damage of any kind, the device should not be used.
 - If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
 - Keep the device and the cable away from heat, direct sunlight, moisture, sharp edges and suchlike.
 - Never use the device unsupervised! Switch off the device whenever you are not using it, even if this is only for a moment.
 - Use only original accessories.
 - Do not use the device outdoors .
 - Under no circumstances must the device be placed in water or other liquid, or come into contact with such. Do not use the device with wet or moist hands .
 - Should the device become moist or wet, remove the mains plug from the socket immediately . Do not reach into the water.
 - Bread may burn. Therefore toasters must not be used near or below curtains and other combustible materials, They must be watched.
 - The temperature of accessible surfaces may be high when the appliance is operating. Never touch the metal parts with your fingers!
 - Use the device only for the intended purpose.

Special Safety Instructions for this Appliance

- Always watch the unit while it is being used! (Very dry bread can start to burn when being toasted!)
- The metal parts on top will be heating up! **DANGER OF BURNS !**

-
- When first time to use the unit , there will be slightly smoke and smell come out , they are from the heating elements and harmless . it will disappear after 5-10mins dry baking .
 - Do not set up the unit next to inflammable objects (e.g. curtains, wood, etc.)!

Operation

1. Only connect the unit to a properly installed and earthed power socket (220~240 volts, 50/60Hz).
2. To set the toasting level turn the selector clockwise from the lightest setting 1– to the darkest setting -7. If you are not sure, start with a lower setting . Normally our golden setting will between setting 4-5, you will get an excellent bread with this levels.
3. Insert one slice of bread per toasting slot and lower the slot with the lever until it snaps into place.
4. The unit starts to toast and switches off automatically at the end. The slide pops up automatically.
5. Cleaning the bread crumbs by the removable tray on the bottom of unit .
6. Allow the unit to cool down before you put it away.

Stop : For the anticipated stopping of the toasting procedure.

Reheat : It allows you to reheat already toasted bread or to toast bread which is not toasted enough during a short time without modifying the browning degree.

Deforst : it allows you to toast the bread that has been frozen beforehand.

Toasting grid: For the toasting of bread rolls, Tip up the toasting grid by pressing the lock slide sideways.

Maintenance and Cleaning

- Pull the mains plug out of the mains socket before you clean the unit and allow the unit to cool down.
- Only use a slightly damp cloth to clean the outside of the unit.
- Do not use abrasive or aggressive cleaners.

-
- Pull the crumb tray out, remove any bits of bread and put the tray back in.
 - All other maintenance and repair should be performed by a qualified technician.
 - This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
 - Children should be supervised to ensure that they do not play with the appliance.
 - Appliances are not intended to be operated by means of an external timer or separate remote-control system.

Backed by the Nero 1 Year Warranty

Imported by R Weatherdon & Co Pty Ltd

Sydney – Australia

www.weatherdon.com.au

Made in China