



15cm Desk fan

Product code: 749015



INSTRUCTION MANUAL

Please read these instructions carefully and keep for future reference.


SAFETY INSTRUCTIONS

1. The appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capability or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
2. After removing the packing materials, check the integrity of the appliance; if you are unsure, do not use it and ask for professional help. The packing materials (plastic bags, polystyrene foams, nails, etc) must be kept out the reach of children because they are potential source of danger.
3. This appliance is intended for household use only, and it is suitable for domestic ventilation according to the methods shown in this manual. Any other use is considered inappropriate and therefore dangerous. The manufacturer cannot be held responsible for eventual damages caused by inappropriate, improper or irresponsible use and/or for repairs made to the product by unauthorised personnel.
4. Don't connect the fan to the power supply until the fan is fully assembled.
5. Before connecting the appliance check the electrical data shown in the rating label, correspond to the main supply electrical data.
6. Unplug the fan before any adjustment or cleaning procedures.
7. Never operate the fan if it has damaged or worn parts. It should be returned to the manufacturer, its service agent or similar qualified person for repair.
8. Always use on a stable level surface.
9. Never immerse the product in water or other liquids.

10. Don't put any heavy object on power cable. Keep the cable far from heat source. The cable could be damaged.
11. Do not spray anything inside the fan.
12. Do not use the fan near flammable materials or substances.
13. To reduce the risk of electric shock, do not remove any screw from the product.
14. Do not insert fingers or other objects through the fan's guard.
15. If power cord is damaged, the appliance must not be used. It must be returned to the manufacturer, its service agent or similar qualified person in order to avoid hazard.
16. Do not pull the mains cable or the appliance itself when disconnecting the plug from the socket.
17. Do not let cord hang over edge of table, or touch hot surface.
18. Be sure that every part of the fan is correctly assembled following the instructions given in this manual. It can cause harm to users if it is assembled incorrectly. The supplier cannot be considered responsible in this case.
19. Never use the product for other purposes.
20. Don't leave the product unattended when it is operating.
21. To avoid overheating, it is recommended to fully unwrap the power cable when the product is operating.
22. Do not use the appliance after a possible irregular working. Switch it off and have it repaired by qualified electricians.
23. Position the product to a reasonable distance from walls, doors, windows or any object that could cause it to malfunction.
24. Do not touch the appliance if your hands are wet or barefooted.
25. Do not use in outdoor or expose the appliance to atmospheric agents such as rain, wind, snow, hail.
26. Do not move the appliance while it is operating.
27. Don't unplug the product pulling the power cable or the product itself.
28. Don't pull the power cable to move the product.

29. Don't position the product too close to the power outlet.
30. In general, the use of multiple plugs and/or extensions is not recommended; if they are necessary, use only simple or multiple adaptors and extensions in accordance with the applicable safety standards.
31. Always unplug the appliance when you are assembling, disassembling, cleaning or adjusting any parts.
32. Never pull the power cable or the product itself to unplug the product from the socket.
33. Do not place the appliance near an open flame, cookers or any other heating appliances.
34. Keep the fan far away from curtains, or materials that could obstruct the air intake grille.
35. Make sure that the power cable is not touching rough, hot or moving surfaces and not twisted or wrapped around the appliance.
36. Do not use the appliance with a timer or a programmer or with a system that can switch on the appliance automatically to avoid risk of fire.
37. The power socket must be easy to reach so the plug can be removed quickly in case of emergency.
38. Position the appliance on a horizontal, flat surface or table; do not stand it on an inclined surface.

PARTS DESCRIPTION

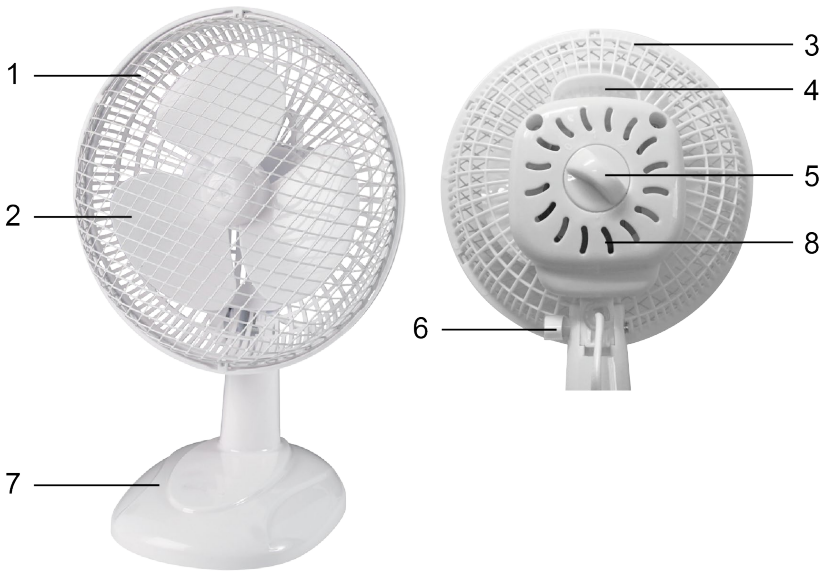

1. FRONT GUARD
2. FAN BLADES
3. BACK GUARD
4. HANDLE

5. SPEED CONTROL SWITCH
6. BOLT / WING KNOB
7. BASE
8. MOTOR HOUSING

ASSEMBLY

1. Position the front grill against the rear grill and clip together.
2. Fully tighten the knurl bolt to fix the base.
3. This appliance comes with a standard base and the clip base.

OPERATION

1. Connect the power plug to a suitable outlet.
2. Select the desired speed by pressing the switch 0/1/2.
0 – Device Off
1 – Low Speed
2 – High Speed
3. The incline of the ventilator head can be adjusted by tilting it forward or backward. The ventilator head can then be locked into position, which is indicated by an audible click.

MAINTENANCE

To safely take care of your fan, please remember to follow these instructions below:

- ◆ Always remove the plug from the socket-outlet, and allow the fan to stop completely before cleaning the fan
- ◆ Do not allow water to drip on, or enter into the fan housing
- ◆ Always use a soft wet cloth to clean the body, and vacuum cleaner to clean the dust from the blades
- ◆ Do not use any of the following agents as a cleaner: Gasoline, Thinners, or Benzene
- ◆ In case of malfunction or doubt, do not try to repair the fan yourself, it may result in a fire hazard or electric shock
- ◆ Clean the fan grill, housing and base with a soft damp cloth.
- ◆ Do not attempt to remove the fan blades. Please use caution around the motor housing area.
- ◆ Do not allow the motor, or other electrical components to be exposed to water.
- ◆ When storing your fan in the off-season, it is important to keep it in a safe dry location. It is important to protect the fan head from any dust.

SPECIFICATIONS

VOLTAGE	FREQUENCY	POWER
220-240V~	50Hz	20W

CORRECT DISPOSAL OF THIS PRODUCT



“Implementation of Directive 2012/19/EU on Waste Electrical and Electronic Equipment (WEEE)”, pertaining to reduced use of hazardous substances in electrical and electronic equipment, as well as to waste disposal”. The symbol of the crossed-out wheeled bin on the equipment or on its packaging indicates that the product must be disposed of separately from other waste at the end of its service life. The user must therefore take the dismissed equipment to suitable separate collection centres for electrical and electronic waste, or return it to the dealer in case they purchase a new device of equivalent type, at a one-to-one-ratio. Suitable segregated collection of the equipment for subsequent recycling, treatment or environmentally-friendly disposal helps prevent damage to the environment and to human health, and encourages the re-use and/or recycling of the materials that make up the equipment. Abusive disposal of the product by the user shall result in the application of administrative fines in accordance with the laws in force.

1 year warranty

Nero is a registered trademark of R Weatherdon & Co Pty Ltd

www.weatherdon.com.au

Made in China

Email: sales@weatherdon.com.au | Ph: +61 2 9906 2202 | Visit: www.weatherdon.com.au