 




INSTRUCTION MANUAL

Code: 749020

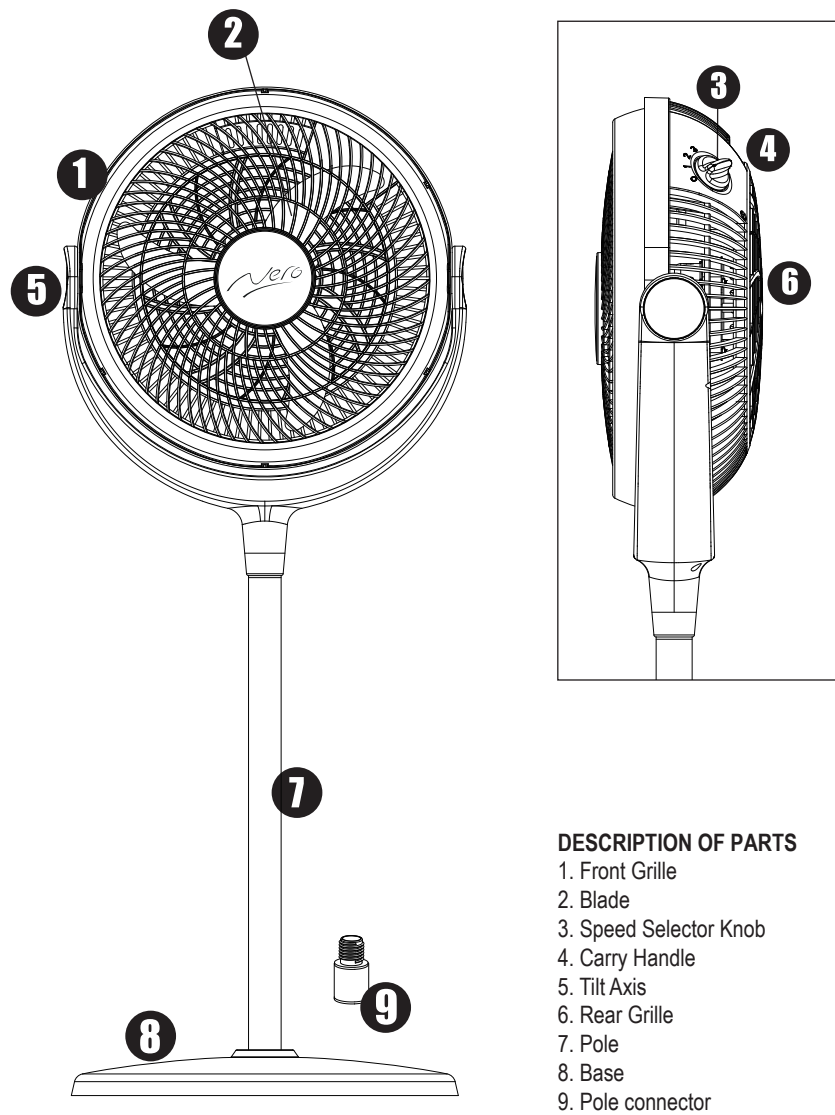 


DESCRIPTION OF PARTS

1. Front Grille
2. Blade
3. Speed Selector Knob
4. Carry Handle
5. Tilt Axis
6. Rear Grille
7. Pole
8. Base
9. Pole connector

WARNING: To reduce the risk of fire, electric shock or personal injury:

- a) Do not use this Fan with any solid-state speed control device.
- b) Unplug Fan before cleaning or servicing.
- c) If you disassemble your Fan, completely reassemble before plugging into outlet.
- d) To reduce the risk of electric shock and injury to persons, do not use in window.

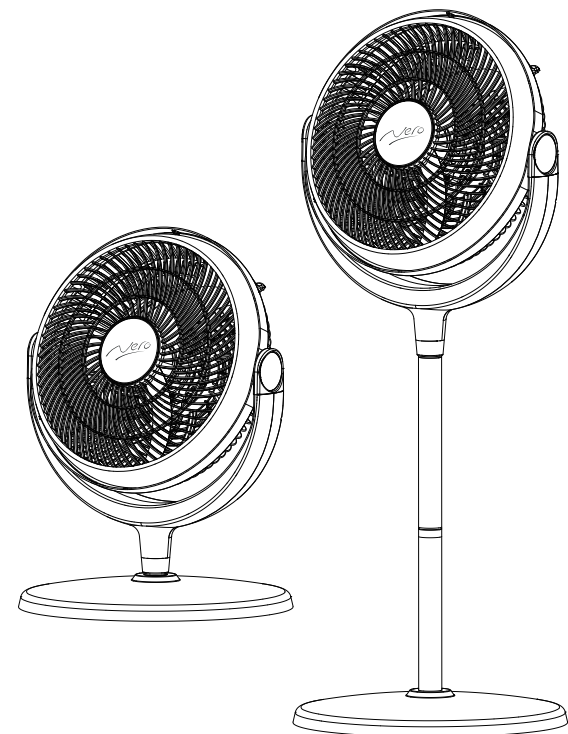

PLEASE READ AND SAVE THESE IMPORTANT INSTRUCTIONS

SPECIFICATIONS

Model	Speed	Power (W)	Voltage	Frequency
749020	3	35W	220V~240V	50Hz

20cm (8-inch) Floor / Desk Fan

Fold

Back

IMPORTANT INSTRUCTIONS

Read and save these important safety instructions before using this fan. When using electrical appliances, basic safety precautions should always be followed including the following:

 
WARNING - To reduce the risk of fire or electrical shock, do not use this product with any solid state speed control device. To reduce the risk of fire or electric shock and injury to persons, do not use in a window.

This product employs overload protection (fuse). A blown fuse indicates an overload or short-circuit situation. If the fuse blows, unplug the product from the outlet. Replace the fuse as per the user service instructions (follow marking for proper fuse rating) and check the product. If the replacement fuse blows, a short-circuit may be present and the product should be discarded or returned to an authorized service facility for examination and/or repair.


- Use the fan only as described in this manual. Other uses not recommended and may cause fire or electric shock.
- To protect against electrical shock, do not place fan in window, immerse unit, plug or cord in water, or spray with liquids.
- Unplug the fan from the outlet when not in use, when moving fan from one location to another and before cleaning.
- Do not operate the fan in the presence of explosive and/or flammable fumes.
- Do not place the fan or any parts near an open flame, cooking or other heating appliance.
- Avoid contact with moving fan parts.
- To disconnect, grip the plug and pull it from the wall outlet. Never yank the cord.
- The use of attachments is not recommended and may cause hazards.
- Always use on a dry, level surface.
- Do not operate if the fan housing is removed or damaged.
- Do not operate any fan with a damaged cord or plug.
- Discard fan or return to an authorized service facility for examination and/or repair.
- Do not run cord under carpeting. Do not cover cord with throw rugs, runners, or similar coverings. Do not route cord under furniture or appliances. Arrange cord away from traffic area and where it will not be tripped over.
- The appliance is not to be used by children or persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction.
- Close supervision is necessary when any appliance is used by or near children.

ASSEMBLY

1. Carefully remove the fan from the carton. Place base flat on floor.
2. **Stand Fan Option** - Line up the notch on the base connector (9) and insert into the base (8) to snap it in place. Twist the pole (7) until secured.

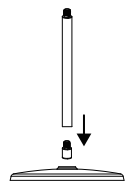


 3. Place the Head Assembly onto the end of Pipe and continue turning until it is tightened on the pole.

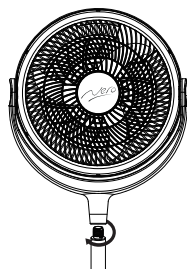

HOW TO OPERATE

 1. Set the fan on a level and dry surface.
2. Plug the power cord into the socket, making sure the speed control is at OFF position.
3. To operate the fan, rotate the switch knob to the desired speed Low(1), Med(2), High(3).
4. Adjust the fan to your desired angle by moving the head up or down.
5. After turning the fan off, unplug the unit from the electrical outlet.

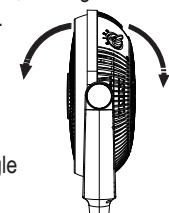

CAUTION: Plastic or rubber tabs like the feet on this unit may stick to furniture surfaces and hardwood floors. The unit may leave a residue that could darken, stain or leave permanent blemishes on the finish of certain surfaces, including wood surfaces and hardwood floors.

CLEANING

- Be sure your fan is in the OFF position.
- Unplug the fan before cleaning.
- Use only a soft, damp cloth to gently wipe the fan.
- DO NOT immerse the fan in water and never allow water to enter the motor housing.
- DO NOT use gasoline, paint thinner or other chemicals to clean the fan.
- NEVER attempt to take apart the fan.



STORAGE INSTRUCTIONS

This product must be packaged in its original box for storage. Place the fan in a storage room with low humidity.

TROUBLE SHOOTING TIPS

If your fan fails to operate, see below for a probable cause and solution:

- Be sure the power cord is plugged into a working electrical outlet.

If you have a problem that can not be resolved by the step listed above, please return the fan to the place of the original purchase or see your warranty. Do not attempt to open the motor housing yourself - doing so may void your warranty and cause damage to the fan or personal injury.

Imported By R. Weatherdon & Co Pty Ltd
Sydney - Australia
www.weatherdon.com.au
Made in China